



How SB52 BT Pairing with Android Device Under Yocto Linux

InnoComm Mobile 開元通訊

July 2020



Pairing is initiated by Android device

- On SB52 side

1. # **app_cli** (*app_cli is a Linux utility developed by MTK and it can be used for controlling BT/WiFi under Yocto Linux*)
2. In app_cli, please execute app.bt.btpair command
command>**app.bt.btpair**

- On Android device side

3. Turn on BT and find “MT8516(xxx)” then pair it, the pairing should be successful.

Pairing is initiated by SB52 side

- On Android device side
 1. Turn on BT (Please make sure BT is visible by other devices)
- On SB52 side
 2. **# app_cli**
 3. **command>app.bt.btscan**
(Check the btaddr of remote device from scan result,)
 4. **command>app.bt.pair 04:92:26:76:F2:2B 0**
(Format is app.bt.pair <btaddr of remote device> <transport, 0:edr/br | 1:ble >
- On Android device side
 5. Accept the pairing request then the pairing should be success.